


Toilet Tissue Holder – Recessed, Chrome Plated Zamak

Toilet Tissue Dispensers

MasterFormat Section 10 28 13

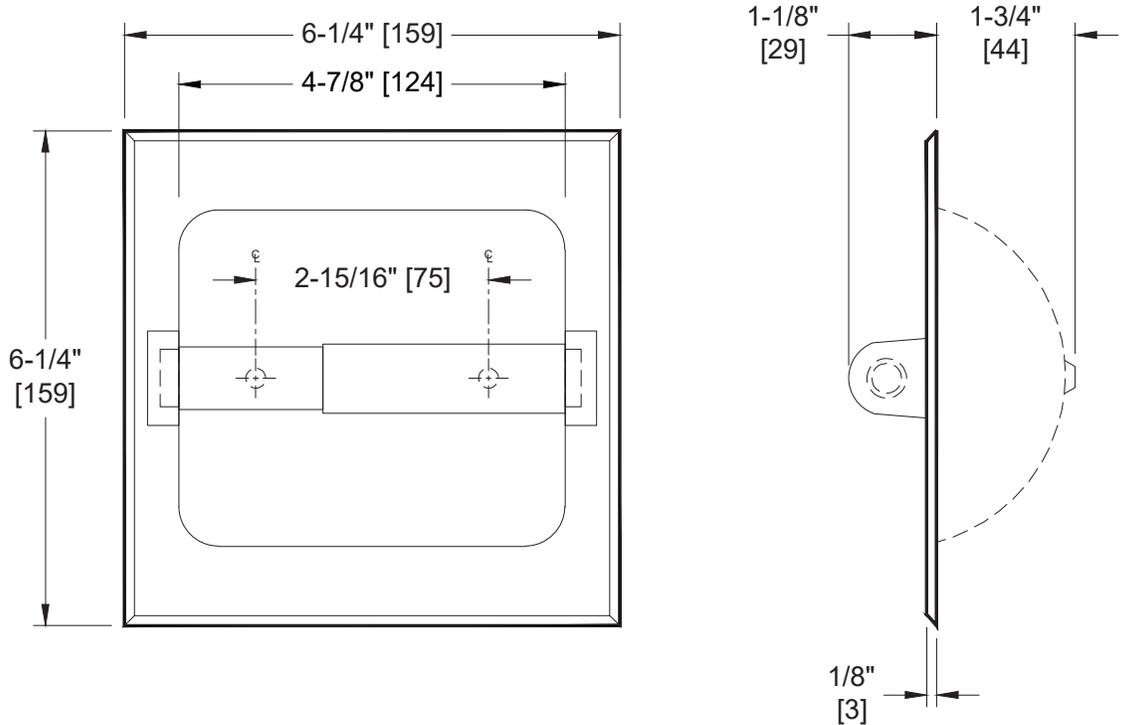

Scan for Information



SUSTAINABILITY/LEED

NOTE:
ALL DIM'S INCH [MM]
ILLUSTRATION FOR REF ONLY AND NTS

PRODUCT OVERVIEW

Holds any standard core roll tissue up to 5" diameter [Ø127]. Die-cast of Zamak in seamless one-piece construction. Back includes two (2) perforated lugs for wet wall anchoring and two (2) dimpled holes for dry wall installation. Dry wall clamp will be supplied for dry wall installation. A plastic, spring-loaded, removable roller held between two (2) solid bars holds paper roll. All exposed surfaces are triple plated with copper, nickel and chrome to a mirror finish.

KEY FEATURES & SPECIFICATIONS

- Single Roll Dispenser
- Chrome Plated Zamak
- Recessed

OPERATION & MAINTENANCE

Spring-loaded spindle revolves freely and holds roll until core is removed. Roll revolves freely on spindle. Roll is replaced manually on a schedule determined by maintenance needs.

TECHNICAL INFORMATION / PRODUCT PROPERTIES

Property	Value
Dimensions	6-1/4" [159] W x 6-1/4" [159] H x 3" [76] D
Construction	Chrome Plated Zamac
Mounting	Recessed
Capacity	Holds one (1) roll of standard core roll toilet paper up to 5" Dia. [Ø127]

INSTALLATION

Loosely attach dry wall clamp (supplied with model # 0402-DZ) to the back of the unit with two (2) stainless steel Philips flat or oval head #10B (or 10AB or 10BP) self-threading screws (provided by others to suit wall conditions) through dimpled holes at back of shell. Apply a continuous bead of silicone sealant (by others) behind flange. Insert into RWO and adjust clamp so that it grips inside wall surface through opening. Secure accessory to clamp and wall by tightening screws. Wipe off excess sealant immediately. For compliance with 2010 ADA Accessibility Standards, unit should be installed with centerline of roller 19" [483] min above finished floor (AFF) to 42" [1067] max AFF and 7" [178] min to 9" [229] max from front of commode to centerline of dispenser.

Rough Wall Opening (RWO) required is 5-1/4" [133] W x 5-1/4" [133] H x 2" [51] D minimum

OPTIONS

Installation Options:

For Wet wall Recessed Mounting: Apply grout to back of unit and on perforated lugs and push unit into opening to seat flange flush with wall face. Allow unit to set and grout to cure before use.

For Standard Dry Wall Recessed Mounting: Use two (2) No 10 stainless steel Philips flat or oval head self-threading or wood screws (by others) of suitable length to penetrate blocking in back of RWO by approximately 1/2" (13). Apply a continuous bead of silicone sealant (by others) behind flange and under screw heads. Tighten screws to hold flange tight against finished wall face. Wipe off excess sealant immediately.

Optional Method for Dry Wall Recessed Mounting: Loosely attach dry wall clamp (supplied with model # 0402-DZ) to the back of the unit with two (2) stainless steel Philips flat or oval head # 10B (or 10AB or 10BP) self-threading screws (provided by others to suit wall conditions) through dimpled holes at back of shell. Apply a continuous bead of silicone sealant (by others) behind flange. Insert into RWO and adjust clamp so that it grips inside wall surface through opening. Secure accessory to clamp and wall by tightening screws. Wipe off excess sealant immediately.

WARRANTY

One (1) Year from date of Invoice